

Installation Instructions

Lumen Logic RGBW LED Corner Floor Lamp
LLSI-9103


WARNING

This luminaire is intended for installation in accordance with local codes and the National Electric Code (NEC). Failure to adhere to these codes and instructions may result in serious injury, property damage and void the warranty.

These instructions do not intend to cover all variations in installation, operation maintenance or mounting situations.

1. Identify all parts before installation.
2. This luminaire is suitable for dry location only.
3. **WARNING:** risk of electrical shock. Use included power supply only.
4. **WARNING:** risk of fire. Keep this lamp away from materials that may burn.


FIGURE 1

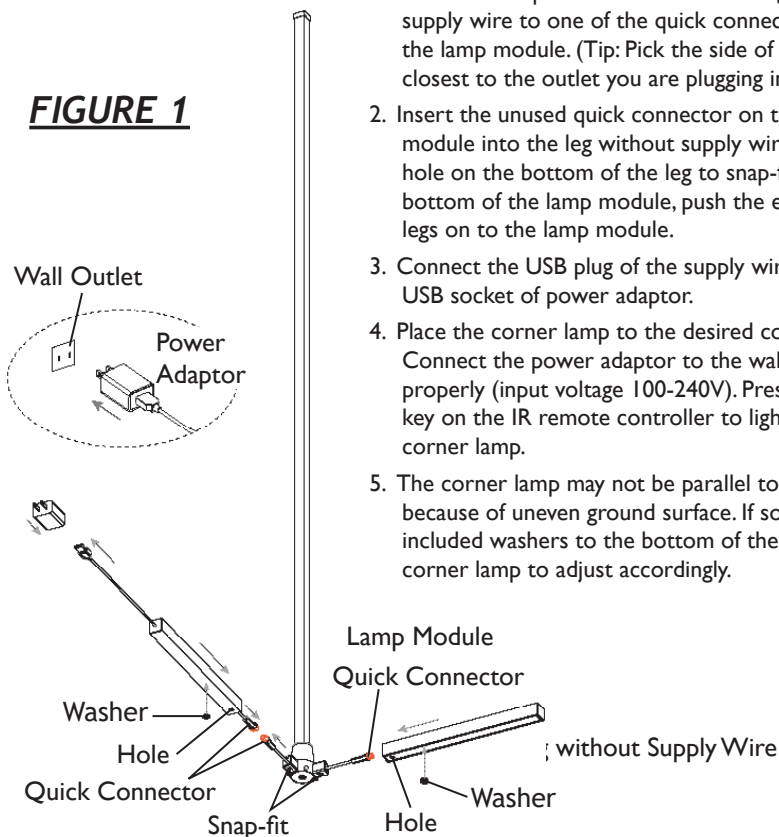

1. Connect the quick connector on the leg with supply wire to one of the quick connector on the lamp module. (Tip: Pick the side of the lamp closest to the outlet you are plugging into)
2. Insert the unused quick connector on the lamp module into the leg without supply wire. Align the hole on the bottom of the leg to snap-fit on the bottom of the lamp module, push the ends of two legs on to the lamp module.
3. Connect the USB plug of the supply wire to the USB socket of power adaptor.
4. Place the corner lamp to the desired corner. Connect the power adaptor to the wall outlet properly (input voltage 100-240V). Press ON/OFF key on the IR remote controller to light up the corner lamp.
5. The corner lamp may not be parallel to the wall because of uneven ground surface. If so, add the included washers to the bottom of the legs of the corner lamp to adjust accordingly.

Installation Instructions

FIGURE 2

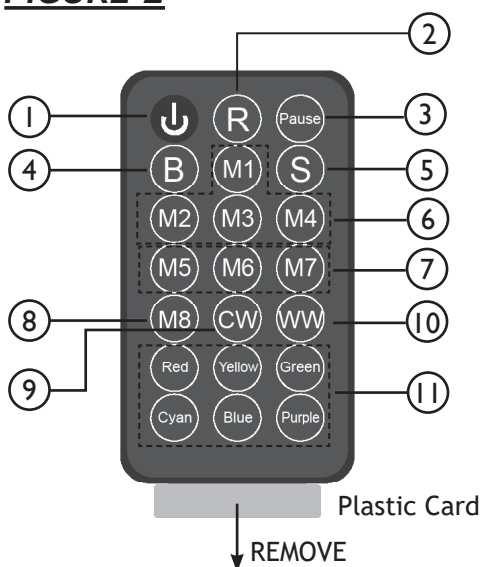

Pull out the plastic card to remove it from the IR remote controller before using.

Refer to following instructions and functions of each button of the IR remote controller:

1. ON/OFF
2. “R”: Reset. While light is in dynamic modes or breathe cycle mode, press “R” to reset the light to the last static single color.
3. “Pause” : Press one time to pause current dynamic mode and light color. Press again to unpause the status.
4. “B”: Brightness control. Press to change brightness (5% ---> 50% ---> 100%).
5. “S”: Speed control. Press to change dynamic speed (low ---> medium ---> high).
6. “M1/M2/M3/M4”: 4 dynamic modes. Each of the four buttons is set to a default dynamic mode. Press one of these dynamic mode buttons first to activate the default dynamic colors. If you press any of the single color buttons afterwards, the dynamic mode will change to the single color you just pressed. Press the same dynamic mode button to reset back to default dynamic color.
7. “M5/M6/M7”: 3 dynamic modes. Each of the three buttons is set to a default dynamic mode. Press one of these buttons to activate the default dynamic colors. Single color buttons ARE NOT workable under these modes, only the default.
8. “M8” : Pulse cycle mode. Press to activate the default pulsing cycle colors. Single color buttons ARE NOT workable under this mode.
9. “CW” : Cold white light.
10. “WW”: Warm white light.
11. Single color buttons: Red, Yellow, Green, Cyan, Blue, Purple. Light specific color by pressing respective color key.