


# Installation Instructions

LED Head Lamp


LLSI-9101

## WARNING

1. Make sure the lights are fully charged before use.
2. Do not illuminate the human eye directly, causing immediate or temporary blindness. This product is not a toy, please ensure that light is used under the guidance of an adult.
3. Do not expose the product to the sun for a long-time, do not use any chemical agent when cleaning for preventing breakage.
4. Please do not disassemble the product for preventing any circuit board damage.
5. Don't immerse the product with led bulb into water.

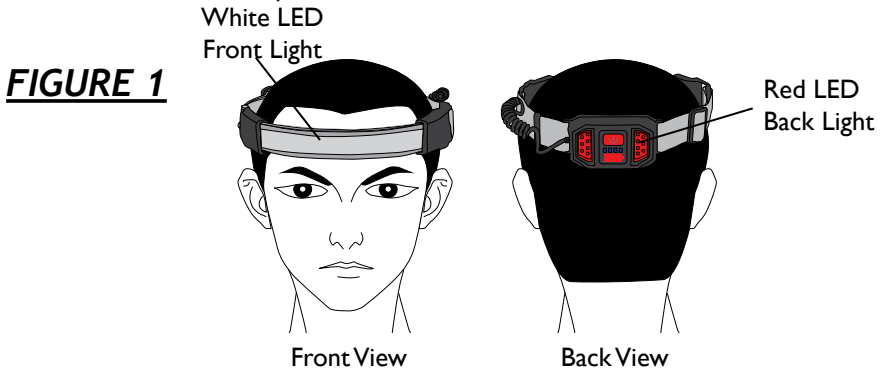

## FIGURE 2

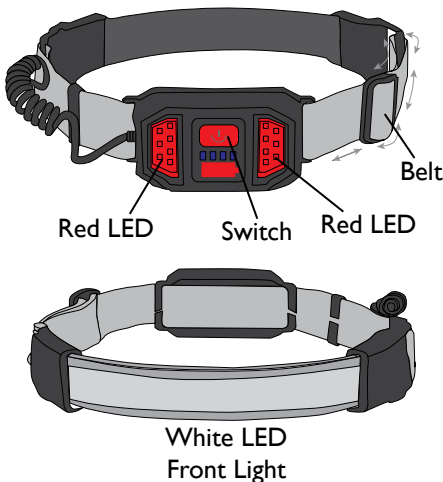


Place the head lamp onto your head and adjust the belt to fit. Press the switch to change the light modes below in the order:

Bright light >>> Dim light >>>  
Flash >>> OFF ...

Note: When the switch is turned on, the red LED back light and white LED front light are lite up at the same time.

# Installation Instructions

## How to charge the Battery of the head lamp?

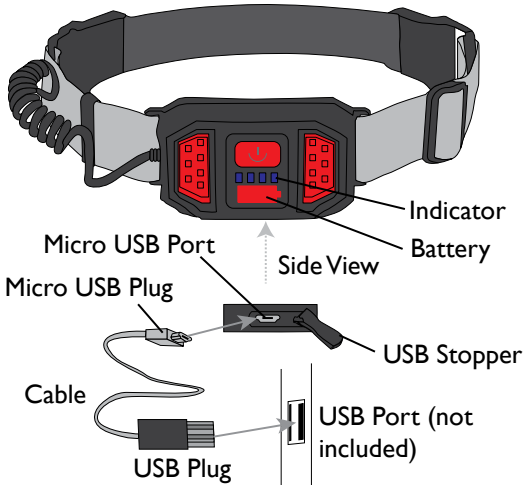

**FIGURE 3**

When only one LED indicator is on, it means low power and it needs to be charged.

1. Open the USB stopper on the side of the battery to expose the Micro USB port.
2. Insert the Micro USB plug on the cable into the Micro USB port.
3. Insert the USB plug on the cable into the USB port of power supply (not included).
4. The blue LED indicator flashes when charging the battery. When all 4 LED lights are on, it indicates that the charging is completed.
5. Close the USB stopper in place once battery is fully charged.

If you do not use the product for a long time, recharge it once a month.